

Soft Flex

Summer Garden Bracelet and Earrings

Designed by: **Sara Oehler**
of SoftFlexCompany.com



Bracelet Materials

Soft Flex® Beading Wire .019 Diameter,
Fluroite Color - 14 inches
Soft Flex® 2x2mm Silver Filled Crimp Tubes - 6 pcs
8x12mm Jesse James Champagne
Rondelle Crystals - 4 pcs
10x14mm Jesse James Cream Round
Beaded Beads - 2 pcs
8mm Jesse James Peach Round Crystals - 2 pcs
10x13mm Jesse James Olive Barrel Beads - 2 pcs
Jesse James Rose Gold Cage Bead - 1 pc
TierraCast Jardin Bar Connectors - 2 pcs
TierraCast Flora Toggle - 1 set



Earrings Materials

Soft Flex® Beading Wire .019 Diameter
Fluroite Color - 6 inches
Soft Flex® 2x2mm Silver Filled Crimp Tubes - 4 pcs
Jesse James Peach 8mm Round Crystals - 2 pcs
TierraCast Jardin Teardrop - 2 pcs
Silver Filled Ear Wires - 1 pair

Tools

Magical Crimping Pliers
Cutters
Paint Brush
Relieving Block
Vintaj Patinas - Rose Gold

Instructions on next page.



Instructions for Bracelet:

Step 1: Patina the connectors and toggle clasp using rose gold patina. Brush the surface with the patina and let it dry. If desired, flip over the connectors and toggle clasp to patina the other side. After dry, brush the surface of each piece with the heaviest grit on the relieving block to expose and polish the pieces.

Step 2: Using 4 inches of beading wire, string a crimp tube and half of the toggle clasp. Pass the wire back through the tube. Crimp the tube and trim excess wire.

Step 3: String a champagne bead, an olive bead, a peach bead, a cream bead, a champagne bead, a crimp tube and half of a connector. Pass the wire back through the crimp tube. Crimp the tube and trim excess wire.

Step 4: Using 3 inches of beading wire, string a crimp tube and the second half of the connector. Pass the wire back into the crimp tube. Using the same wire, string through one end of the cage bead. Pass the wire back through the tube. Crimp the tube and trim excess wire.

Step 5: Repeat Steps 2-4 to complete the second half of the bracelet.

Instructions for Earrings:

Step 1: Patina the drops using rose gold patina. Brush the surface with the patina and let it dry. After dry, brush the surface of each piece with the heaviest grit on the relieving block to expose and polish the pieces.

Step 2: Using 3 inches of beading wire, string a crimp tube and the drop. Pass the wire back through the tube. Crimp the tube and trim excess wire.

Step 3: String a peach bead, a crimp tube and an ear wire. Pass the wire back through the tube. Crimp the tube and trim excess wire.

Step 4: Make a second, identical earring.

Projects not intended for children under the age of 13. The information on this instruction sheet is presented in good faith, but no warranty is given, nor results guaranteed. Jewelry Television® and Soft Flex® Company disclaims all liability from any injury to anyone undertaking the construction of this project as a result of improper safety precautions.

Crimping with Magical Crimping Pliers




Step 1

String a crimp tube. If attaching a clasp or ear wire, make sure that the wires lay side by side.




Step 2

Place the crimp tube inside the groove of the Magical Crimping Pliers and squeeze.

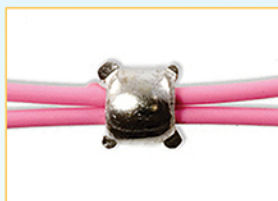

Step 3

The pliers will pinch the four corners of the crimp tube and look like a square.

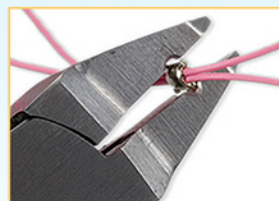

Step 4

Turn the crimp tube on its side in the Magical Crimping Pliers, making sure the top of the square is up and squeeze.



Step 5

Rotate and squeeze a few more times. The crimp should tighten down on the wire and look like a round bead.

Join **Soft Flex** Company^{LLP}

LIVE ON FACEBOOK
with Sara Oehler

www.facebook.com/SoftFlexWire



Subscribe to our YouTube Channel
for regular video tutorials!

www.youtube.com/c/SoftFlexCompany

